
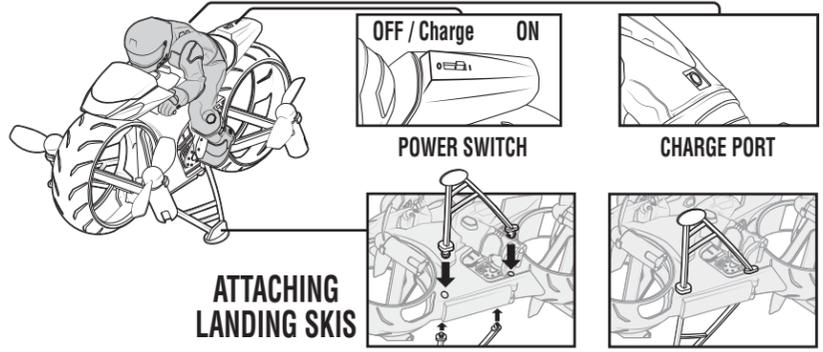
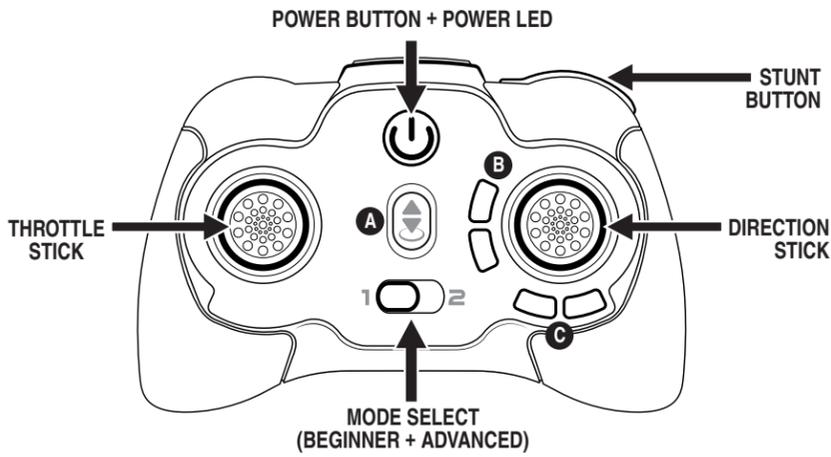


FLIGHT RIDER™


INSTRUCTION GUIDE

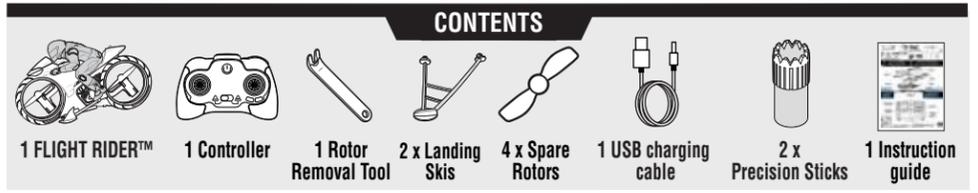

For in-depth video instructions go to AIRHOGS.COM/FLIGHTRIDER

STEP 1

HOW TO INSTALL BATTERIES

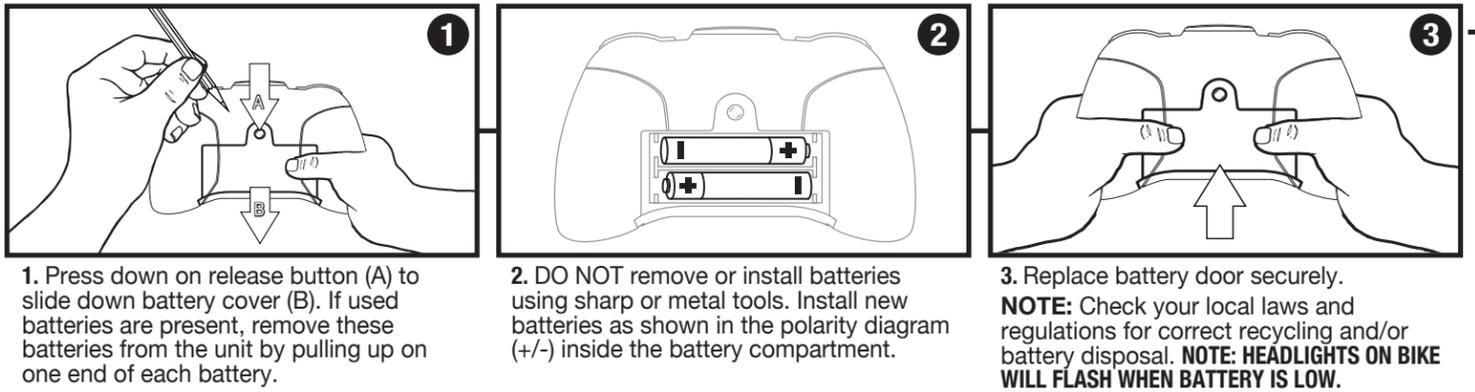

1. Press down on release button (A) to slide down battery cover (B). If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.


2. DO NOT remove or install batteries using sharp or metal tools. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.

3. Replace battery door securely.
NOTE: Check your local laws and regulations for correct recycling and/or battery disposal. **NOTE: HEADLIGHTS ON BIKE WILL FLASH WHEN BATTERY IS LOW.**

STEP 2

CHARGING

The charge port for the FLIGHT RIDER™ is located on the back of the rider.

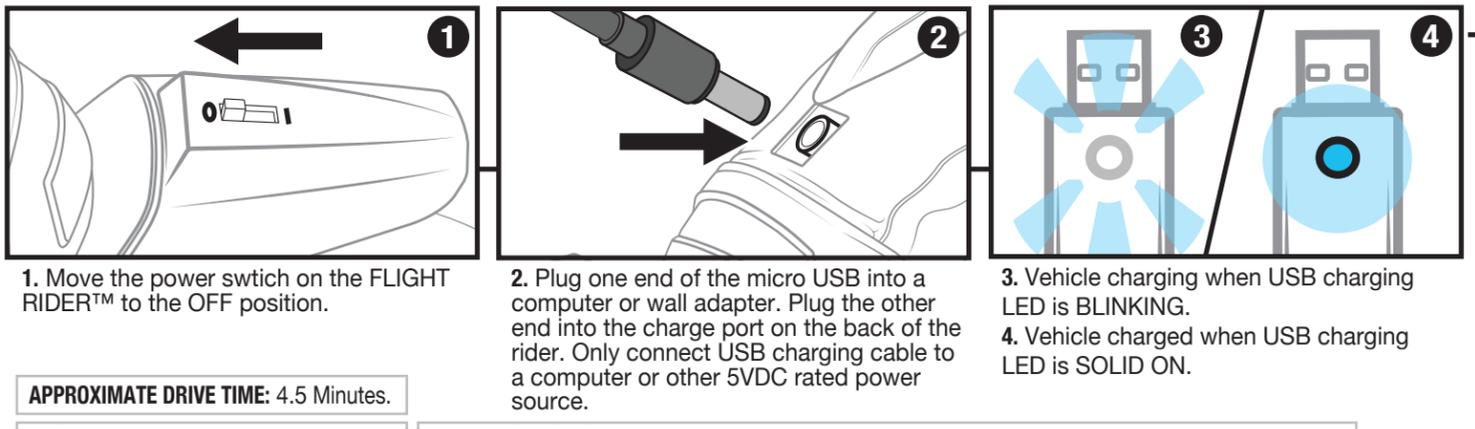


APPROXIMATE DRIVE TIME: 4.5 Minutes.

APPROXIMATE FULL CHARGE TIME: 45 Minutes.

THINGS TO REMEMBER: BEFORE YOU RECHARGE THE BATTERY, WAIT 10-15 MINUTES TO LET THE BATTERY COOL DOWN.

STEP 3

START UP AND BALANCE MODE

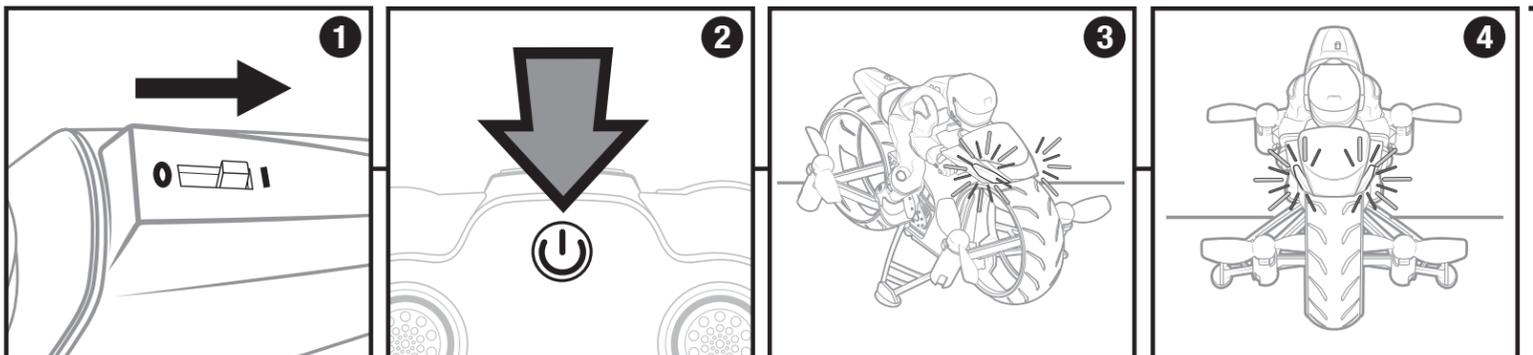


1. Turn on the FLIGHT RIDER™ by sliding the power switch to the ON position.

2. Turn on the controller by pressing the POWER BUTTON.

3. FLIGHT RIDER™ headlights will flash when the bike is pairing with the controller. Headlights are solid when paired.

4. You are now ready to play.

REPLACING ROTORS

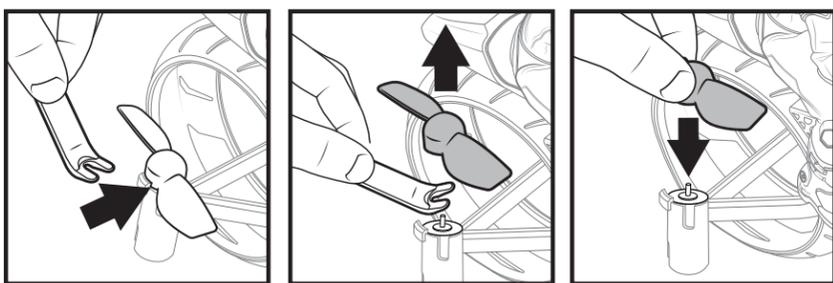


CAUTION: Rotor to be replaced by adult only.

NOTE: If hair or debris gets caught in rotor and prevents rotor from turning, remove and clean.

NOTE: pay special attention to replace rotors with identical shaped rotors. There are 2 different shaped rotors (identified with a circle or square) and their shape and placement can directly affect flight performance.

For Video Tutorial go to: AIRHOGS.COM/FLIGHTRIDER

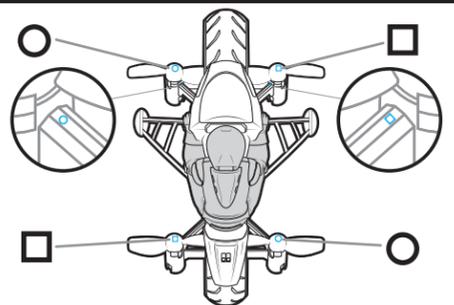

CAUTION: HAIR ENTANGLEMENT – Tie back and cover hair and secure loose clothing prior to play.

INDOOR USE ONLY



NORTH AMERICA – 1-800-622-8339,
1-800-622-8339, customer@spinmaster.com
UK – 0800 206 1191, serviceuk@spinmaster.com
IRELAND – 1800 992 249
AUSTRALIA – 1800 316 982, customer@spinmaster.com




2 x AAA (LR03) 1.5V
Not Included

8+
YRS

BC




DRIVE MODE

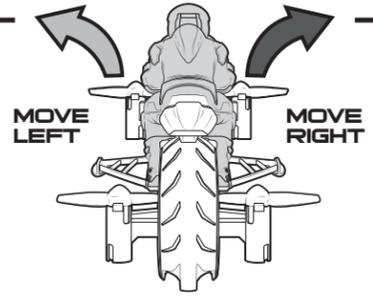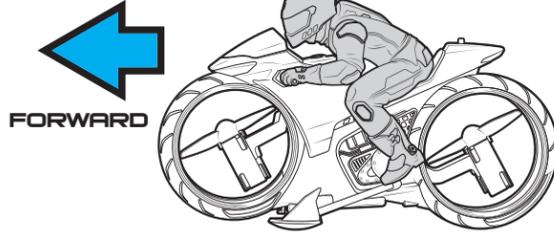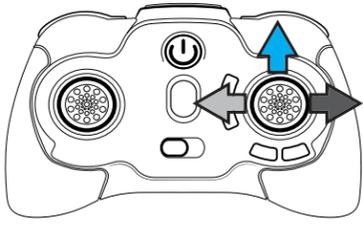

STUNT BUTTON

DRIVING MODE STUNT

While driving in DRIVE MODE, PRESS and HOLD the stunt button to perform a wheelie. The FLIGHT RIDER™ will wheelie for as long as you HOLD the stunt button. Release the button to drive normally.

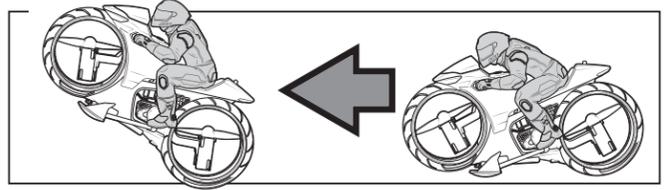


FLIGHT MODE

To enter FLIGHT MODE, push up on the throttle lever. This can also be done by pressing the AUTO LAUNCH AND LAND BUTTON.





THRITTLE all the way down to land and return to DRIVE MODE. This can also be done by pressing the AUTO LAUNCH AND LAND BUTTON.

BEGINNER FLIGHT MODE

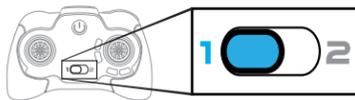


1. BEGINNER MODE CONTROL:

- Slower acceleration and turning for increased control.

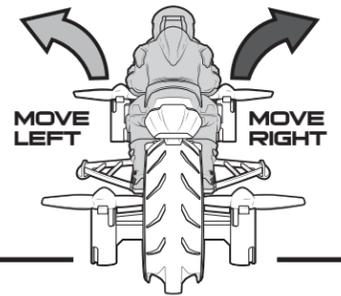
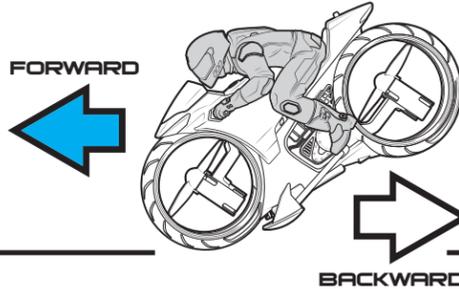
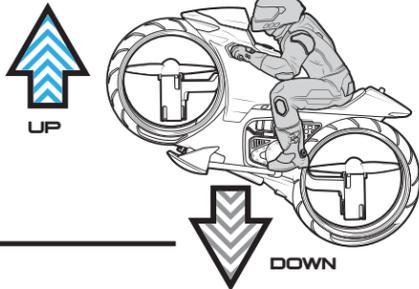
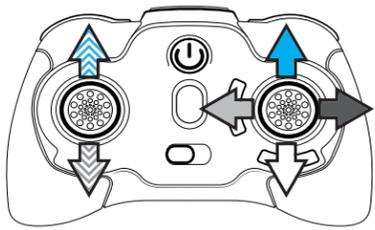


ADVANCED FLIGHT MODE

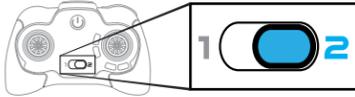

2. ADVANCED MODE CONTROL:

- Faster acceleration and turning for aggressive control.

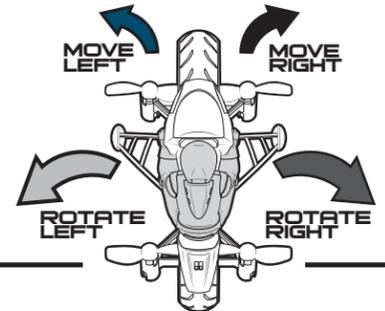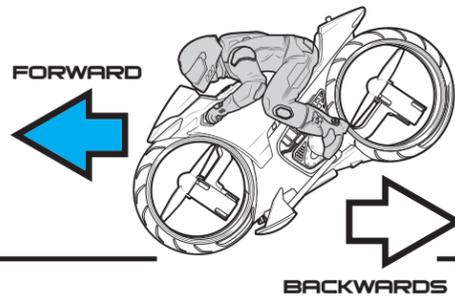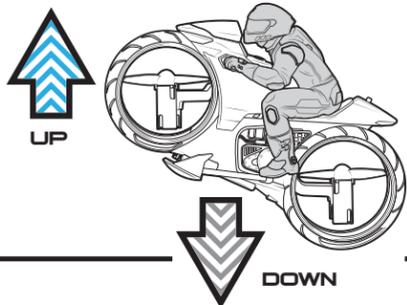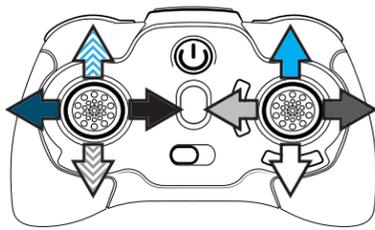


STUNT BUTTON

(BEGINNER & ADVANCED MODE)

FLYING MODE STUNT

While flying in FLIGHT MODE:


1. Steadily fly the vehicle approximately 2 meters (6.5 feet) above the ground.
2. Press the stunt button while moving the direction stick up, down, left or right.
3. The FLIGHT RIDER™ will perform a BARREL ROLL.

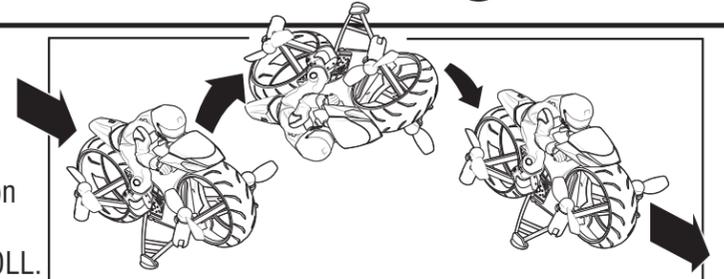

NOTE: FLIGHT RIDER™ will not perform a stunt if the battery is low.

TRIMMING


DRIFTING LEFT / RIGHT

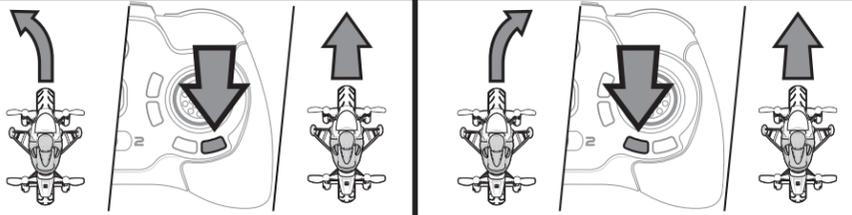

1. IF DRIFTING LEFT, press the right trimming button on the controller until FLIGHT RIDER™ drives in a straight line.

2. IF DRIFTING RIGHT, press the left trimming button on the controller until FLIGHT RIDER™ drives in a straight line.

DRIFTING FORWARD / BACK

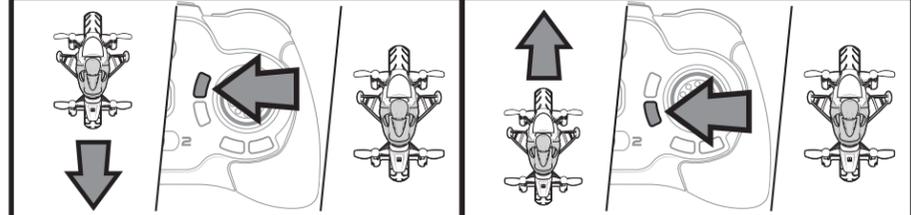

1. IF DRIFTING BACKWARDS, press the forward trimming button on the controller until the FLIGHT RIDER™ stops drifting.

2. IF DRIFTING FORWARD, press the back trimming button on the controller until the FLIGHT RIDER™ stops drifting.

WARNING: IF ROTOR(S) BECOME DAMAGED OR BROKEN, DO NOT FLY. FLYING WITH BROKEN ROTOR(S) MAY CAUSE DAMAGE OR LEAD TO INJURY.

CAUTION: Risk of eye injuries. Do not fly near your face to avoid injuries. Keep rotors away from your fingers, hair, eyes and other body parts. Do not start up or fly when persons, animals or any obstructions are within the flying range of the toy. Always lift from a flat surface. Never hold the flying toy in your hand when lifting off. Do not launch flying toy at people or animals.

SPIN MASTER LTD. 225 KING STREET WEST, TORONTO, ON M5V 3M2 CANADA

Imported into EU by:

SPIN MASTER INTERNATIONAL, B.V., Kingsfordweg 151, 1043 GR Amsterdam, The Netherlands

www.spinmaster.com

Imported by Spin Master Australia Pty Ltd, 18-24, Suite 101, Level 1, Chandos Street, St Leonards, NSW 2065;

☎1800 316 982

MADE IN CHINA

TM & © Spin Master Ltd. All rights reserved. Retain this information, addresses and phone numbers for future reference. Children should be supervised during play. Keep away from obstacles and electrical hazards. Spin Master Ltd. reserves the right to discontinue the www.airhogs.com website at any time.

WARNING: Not suitable for children under 8 years of age. BEFORE FIRST USE: Read the user's information together with your child.

Note for adult supervisors: Check if the toy is assembled as instructed. The assembly shall be performed under the supervision of an adult.

Flying the toy requires skill and children must be trained under the direct supervision of an adult.

For safe use, the room where the toy is used must be sufficiently large.


Do not change or modify anything on the toy.

This toy is intended to be used in a domestic area (house & garden) only.

APPROX. MAX ALTITUDE: 50 m (160 ft)

T44646_0001_20106086_GEN_IS_R4



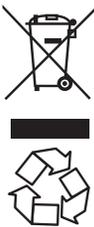

CONTAINS 1 X 3.7V LIPO BATTERY PACK AND REQUIRES 2 x 1.5V AAA (LR03) ALKALINE BATTERIES (NOT INCLUDED).

Batteries or battery packs must be recycled or disposed of properly. When this product has reached the end of its useful life, it should not be disposed of with other household waste. The Waste Electrical and Electronic Equipment Regulations require it to be separately collected so that it can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space. Please do your part by keeping this product out of the municipal waste stream! The "wheelie bin" symbol means that it should be collected as "waste electrical and electronic equipment". You can return an old product to your retailer when you buy a similar new one. For other options, please contact your local council.

PRODUCT BATTERY REMOVAL INSTRUCTIONS:

Internal battery is factory installed and non-replaceable. Product disassembly and battery removal must be performed by an adult. Do not puncture, cut, tear, compress or deform product during disassembly. Ensure product is turned off, then use a screwdriver to remove all screws. Separate product body halves to expose internal electronics. When battery is visible in its entirety, use scissors to cut a single battery wire, immediately wrap the cut wire end with tape to isolate it, repeat until all battery wires are cut and isolated, and the battery is free from the rest of the product. Dispose of battery in accordance with your local battery recycling or disposal laws.

NOTE: Opening of product and/or removal of battery will render product inoperative and voids manufacturer warranties. Dispose of remaining product components in accordance with local laws.

SPECIAL LIPO BATTERY INSTRUCTIONS: Never charge battery unattended. - Charge battery in an isolated area. Keep away from flammable materials. - Do not expose to direct sunlight. There is a risk of the batteries exploding, overheating, or igniting. - Do not disassemble, modify, heat, or short-circuit the batteries. Do not place them in fires or leave them in hot places. - Do not drop or subject to strong impacts. - Do not allow the batteries to get wet. - Only charge the batteries with the specified Spin Master™ battery charger. - Only use the batteries in the device specified by Spin Master™. - Carefully read the instruction guide and use the batteries correctly. - In the unlikely event of leakage or exposure use sand or a chemical fire extinguisher for the battery. - Batteries must be recycled or disposed of properly.

BATTERY SAFETY INFORMATION:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard/rechargeable). Using rechargeable batteries is not recommended due to possible reduced performance. Rechargeable batteries are only to be charged under adult supervision. Replaceable-rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are to be removed from the toy before being charged (excluding LiPo batteries). DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

FCC STATEMENT:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help.

NOTE: Changes, adjustments or modifications to this unit, including but not limited to, replacement of any transmitter component (crystal, semiconductor, etc) could result in a violation of FCC rules under part 15 and/or 95 and must be expressly approved by Spin Master Ltd or they could void the user's authority to operate the equipment. Spin Master Inc., PMB #10053, 300 International Drive, Suite 100, Williamsville, NY 14221. To contact the responsible party please visit fcc.spinmaster.com

For TROUBLESHOOTING questions and solutions, please visit our website: AIRHOGS.COM

NOTE: If normal function of the product is disturbed or interrupted, strong electromagnetic interference may be causing the issue. To reset product, turn it completely off, then turn it back on. If normal operation does not resume, move the product to another location and try again. To ensure normal performance, change the batteries, as low batteries may not allow full function.

SAFETY PRECAUTIONS: - Keep hands, hair and loose clothing away from the rotors when power switch is turned ON. - Turn off controller and toy when not in use. - Remove battery(s) from controller when not in use. - Parental guidance is recommended for the flight. - Keep your toy in your sight so that you can supervise it all the time. - New alkaline batteries are recommended for use in controller to obtain maximum performance. - Users should keep strict accordance with the instruction manual while operating the product.- Your controller/charger is tailor-made for the LiPo rechargeable battery used in your vehicle. Do not use it to charge any battery other than that in the toy.

NOTE: Parental guidance is recommended when installing or replacing batteries. Under the environment with electrostatic discharge, the toy may malfunction and require user to reset the toy.

SPECIAL NOTE TO ADULTS: Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the charger until the damage has been repaired. This toy is not intended for children under 3 years old. This toy must only be used with the recommended charger.

CARE AND MAINTENANCE: Always remove batteries from the toy when it is not being used for a long period of time (controller only). Wipe the toy gently with a clean damp cloth. Keep the toy away from direct heat. Do not submerge the toy in water. This can damage the electronic assemblies.



Battery requirement for toy
 Power Supply: ====
 Rating: DC 3.7V, 220 mAh
 Battery: 1 x 3.7V, 220 mAh LiPo
 Non-replaceable battery
 Rechargeable Battery Pack
 Requires: 1 x 3.7 V LiPo Rechargeable Battery Pack (included)


Battery requirement for controller

 Power Supply: ====
 Rating: DC 3 V, 0.45 W
 Batteries: 2 x 1.5 V AAA (LR03)
 Requires 2 x 1.5 V AAA size batteries (not included)


CE Spin Master International B.V. hereby declares that the radio equipment type FLIGHT RIDER™ is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://doc.spinmaster.com>

Frequency Bands: 2.412—2.472GHz
Maximum Radio Frequency Power Transmitted: 10dBm


Retain this information, addresses and phone numbers for future reference. This toy is only to be connected to equipment bearing either of the following symbols:

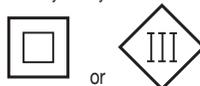


REPLACING CONTROLLER STICKS

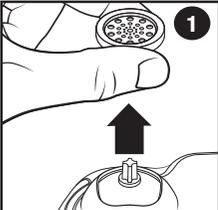

1

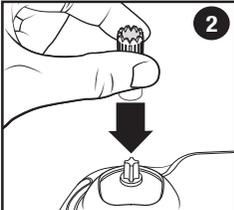

2

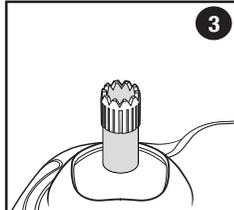

3